


# ADVR125-10F

# ***Universal Hybrid Analog-Digital Voltage Regulator Operation Manual***

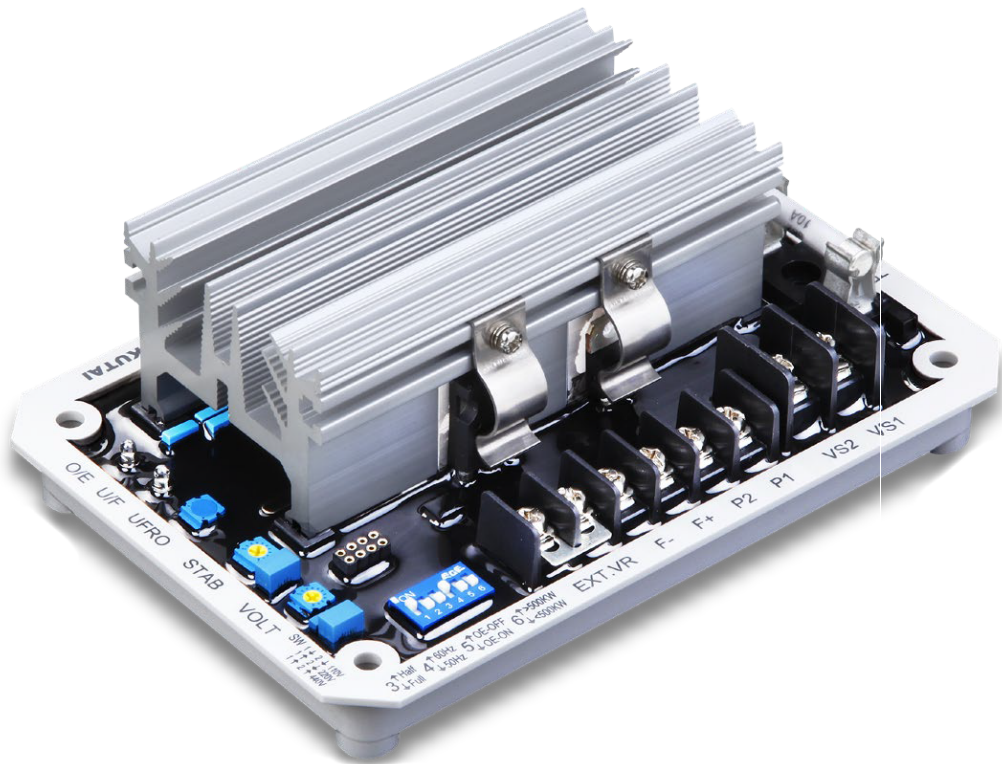

Analog / Digital, Single-phase sensing, Excitation Current 7/10  
Amp Selectable Full-wave or Half-wave Rectifier Output  
For use with self-excited generators.

## SECTION 1 : SPECIFICATION

### Sensing Input (VS1, VS2) Average Readings

Voltage	90 – 540 Vac	1 phase 2 wire
	DIP switch setting	
Adjustment	90 – 130 Vac @ 110 Vac	
	175 – 270 Vac @ 220 Vac	
	350 – 540 Vac @ 440 Vac	
Frequency	50/60 Hz	DIP switch setting

### Power Input (P1, P2)

Voltage	60 – 300 Vac	1 phase
Frequency	40 – 60 Hz	

### External Voltage Adjustment (EXT.VR)

Max. +/- 10% @ 1 K $\Omega$  1 watt potentiometer

### Build Up Voltage

Residual voltage at power input > 5 Vac @ 25 Hz

### Soft Start Ramp Time

3 seconds +/- 10%

### Voltage Regulation

Less than +/- 0.5% (with 4% engine governing)

### Response Time

Less than 20 ms

### EMI

Built-in electromagnetic interference filter

### Static Power Dissipation

Max. 4 watts

### Under Frequency Protection (Factory Presets)

50 Hz system knee point presets at 45 Hz

60 Hz system knee point presets at 55 Hz

### Voltage Thermal Drift

Less than 3% from -40 to +70 °C

### Under-Frequency Knee Point Thermal Drift

Less than +/- 0.1 Hz from -40 to +70 °C

### Environment

Operating Temperature -40 to +70 °C

Storage Temperature -40 to +85 °C

Relative Humidity Max. 95%

Vibration 5.5Gs @ 60 Hz

### Dimensions

162.0 (L) x 112.0 (W) x 59.0 (H) mm

6.38 (L) x 4.41 (W) x 2.32 (H) inch

### Weight

640 g +/- 2%

1.41 lb +/- 2%

## Excitation Output, Resistance, O/E Voltage Protection and DIP SW Setting

	SW3 Position	Power Input	Excitation Output (F+ · F-) *1	Exciter resistance	O/E Voltage Protection *2
Half Wave	ON	110 VAC	Continuous 31 VDC 7A Max. 45 VDC 10A 10 Sec	Min.4.5 Ohm, Max.100 Ohm	Excitation Voltage 43V +/-10 %
		220 VAC	Continuous 63 VDC 7A Max. 90 VDC 10A 10 Sec	Min.9 Ohm, Max.100 Ohm	Excitation Voltage 85V +/-10 %
Full Wave	OFF	110 VAC	Continuous 63 VDC 10A Max. 90 VDC 10A 10 Sec	Min.9 Ohm, Max.100 Ohm	Excitation Voltage 85V +/-10 %
		220 VAC	Continuous 125 VDC 10A Max. 180 VDC 10A 10 Sec	Min.18 Ohm, Max.100 Ohm	Excitation Voltage 170V +/-10 %

\*1 Fuse specification 6.3 x 32 mm 10A Fast Blow type.

\*2 Excitation output will be turned off after a 10 second time delay, Inverse-time curve. This function can be turned off.

## SECTION 2 : EXTERNAL APPEARANCE / DIMENSIONS / INSTALLATION DRAWING

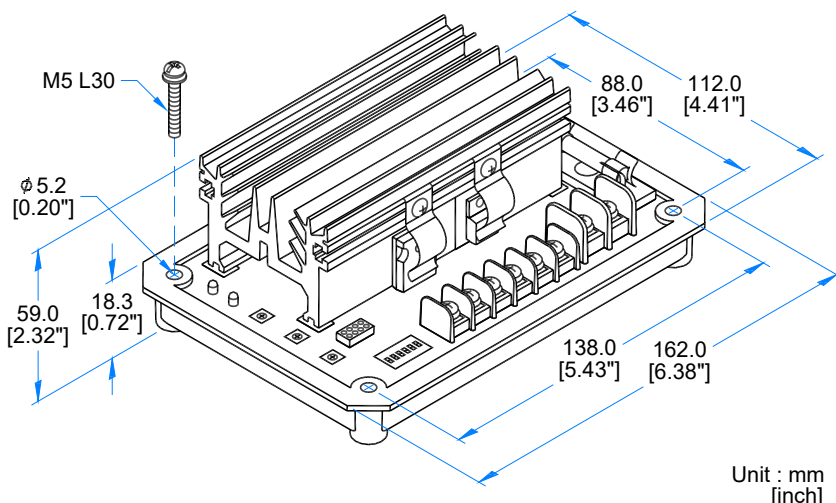


Figure 1 Outline Drawing

### ATTENTION:

1. AVR can be mounted directly onto the engine, genset or any position that will not affect operation. Please see Figure 1 for dimension.
2. Secure all wiring connections. To prevent loose connections, do not install AVR anywhere subject to heavy vibrations. For safety, do not touch the heat sink while in operation.

## SECTION 3 : DIP SWITCH SETTING & VR ADJUSTMENTS

### O/E : Over Excitation Indicator

When excitation output voltage is greater than the setting value, the O/E LED will illuminate.

If SW5 O/E Protection setting is OFF, the excitation output will be turned off after 10 seconds. (The more the voltage exceeds the O/E protection setting, the fewer seconds it will take to shut off.)

### U/F LED : Under Frequency

Indicator  
Illuminated when U/F protection active

### UFRO : Under Frequency Roll Off Protection

Frequency system set by DIP SW4.  
50 Hz system factory preset at 45 Hz  
60 Hz system factory preset at 55 Hz

**STAB : Stability Adjustment**  
Under no-load operation, slowly turn the STAB VR counterclockwise until the voltage is unstable, and then turn it clockwise slightly (about a 10 degree angle) until voltage is stable. Generator response speed can be set by DIP SW6. A generator with larger capacity has a slower response speed.

**VOLT : Voltage Adjustment**  
Voltage set by DIP SW1 & SW2 .

110V : 90 to 130V adjustable  
220V : 175 to 270V adjustable  
440V : 350 to 540V adjustable

## ADVR125-10F

DIP SW SETTING		
SW	SENSING VOLTAGE	
1 OFF 2 OFF	110V	
1 ON 2 OFF	220V	
1 ON 2 ON	440V	

SW	ON	OFF
3	Half wave	Full wave
4	60Hz system	50Hz system
5	O/E Protection Off	O/E Protection On
6	> 500 KW	< 500 KW

FUSE  
10A

DIP SW Setting

**S1 · S2 : Sensing Input**  
Connect sensing voltage  
Max. 600 Vac

**P1 · P2 : Power Input**

Connect working voltage  
Max. 300 VAC  
Wire diameter above  
2.0mm<sup>2</sup> (14AWG)

**EXT. VR : External Voltage Adjustment**

Connect 1 K Ohms 1 Watt  
Potentiometer Short EXT. VR  
when external VR is not use

**F+ · F- : Excitation Output**  
Connect generator field  
Wire diameter above  
2.0mm<sup>2</sup> (14AWG)

### ATTENTION:

- Before using a Megger or a Withstand Voltage Tester, remove the wires connecting to the AVR to prevent high voltage damage to the regulator.
- Improper setting of Under Frequency Roll Off Protection could cause the output voltage of the unit to drop or become unstable with changes in load. Avoid making any changes to the UFRO setting unless necessary.
- The connection wire for EXT. VR must be shielded wire. The grounding wire of shielded wire should be as close as possible to the AVR. It is suggested to directly lock it onto the AVR mounting screw.
- When power input is 110VAC and Generator excitation field voltage is lower than 20VDC at full-load, set at Half-wave output.  
If Generator excitation field voltage is greater than 20VDC, then ADVR125-10F must set at Full-wave output.  
When power input is 220VAC and Generator excitation field voltage is lower than 45V at full-load, set ADVR125-10F at Half-wave output.  
If Generator excitation field voltage is greater than 45V, then ADVR125-10F should be set at Full-wave output.  
If Full-wave output is needed, but ADVR125-10F is set at Half-wave, it may cause a large voltage dip when starting heavy loads or nearing full-load capacity.  
If Half-wave output is needed, but ADVR125-10F is set at Full-wave, it may cause the generator voltage to become unstable.
- To avoid damage or injury, do not change the DIP SW setting when generator is running.

Use only the replacement fuses specified in this user manual.

Appearance and specifications of products are subject to change for improvement without prior notice.

## SECTION 4 : WIRING CONNECTIONS

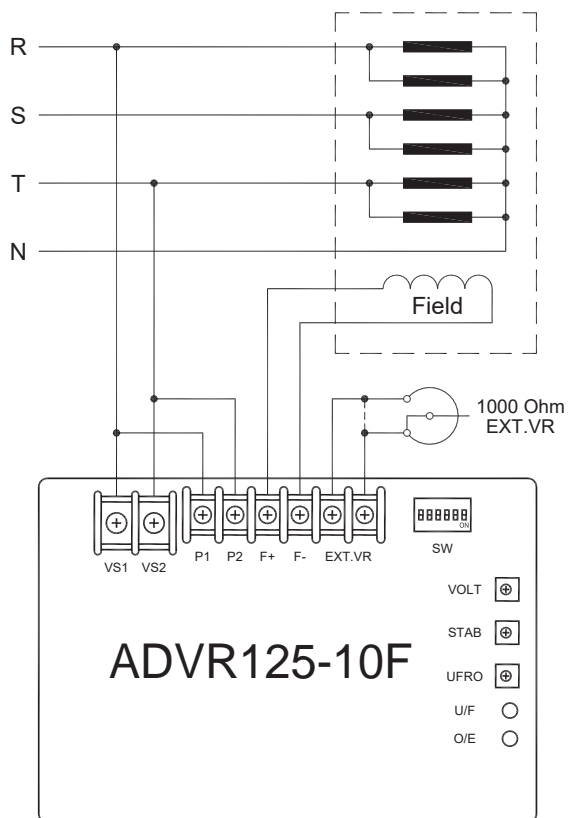


Figure 3 110/220 VAC

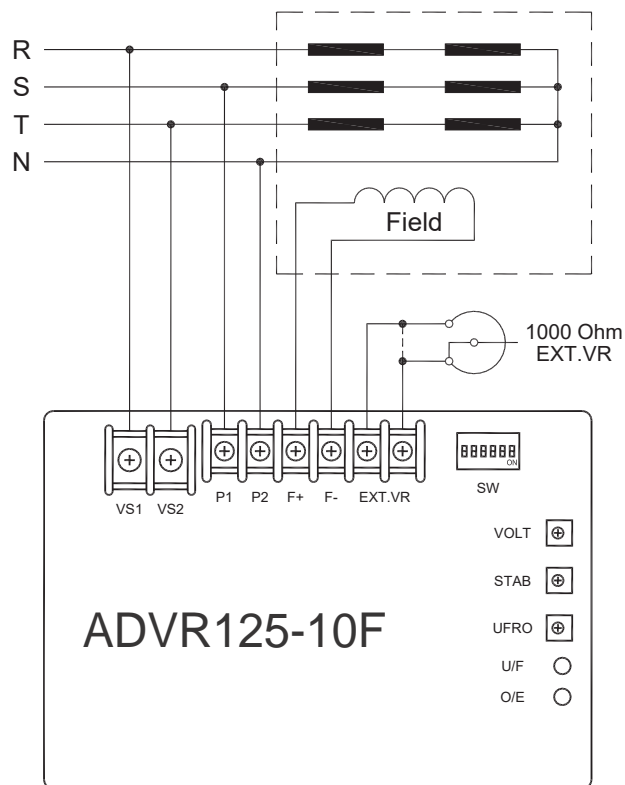


Figure 4 220/380/440 VAC

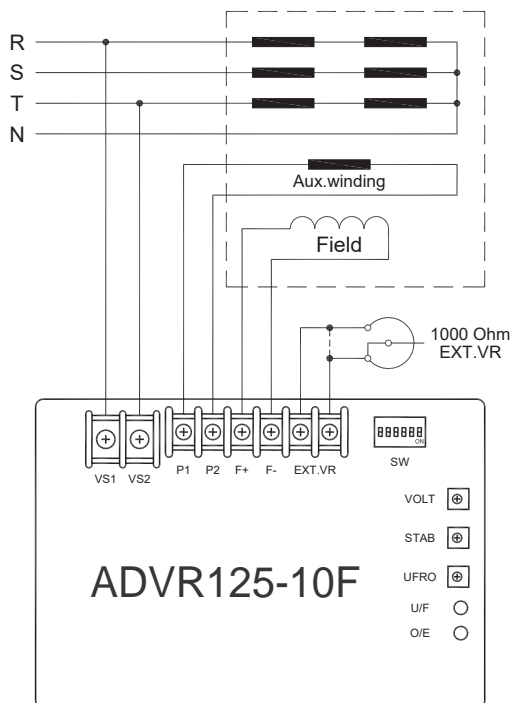


Figure 5 Auxiliary Winding

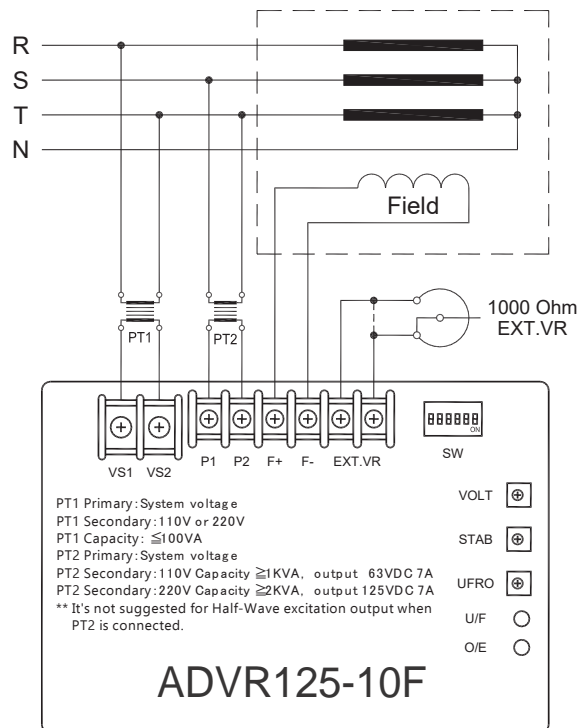


Figure 6 Medium/High voltage generator